


HALO ADAPTOR PLATE REPLACEMENT

TOOLS & PARTS


- Adaptor Plate Replacement Kit
- 7/8" Wrench
- 1/2" Socket w/ socket wrench
- 5/16" Allen Driver
- Torque Wrench
- Loctite 242 (medium/blue threadlocker)

DESCRIPTION

These instructions detail the replacement of the Halo Adaptor Plate.

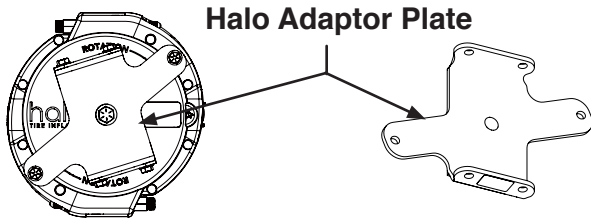

WARNING These instructions are not for all Halo versions. **DO NOT USE** these instructions to replace adaptor plates if your Halo has the center bolt shown in the lower left image.

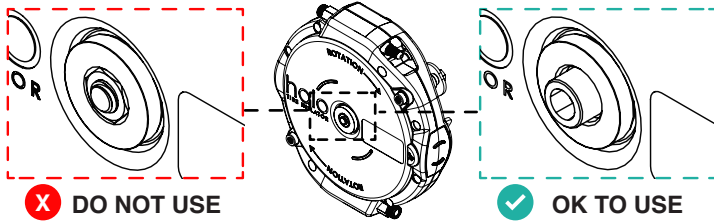


REMOVE ADAPTOR PLATE

STEP 1: REMOVE CENTER BOLT & OUTER BOLTS

Tools: 5/16" allen driver
7/8" wrench

Tool: 1/2" socket

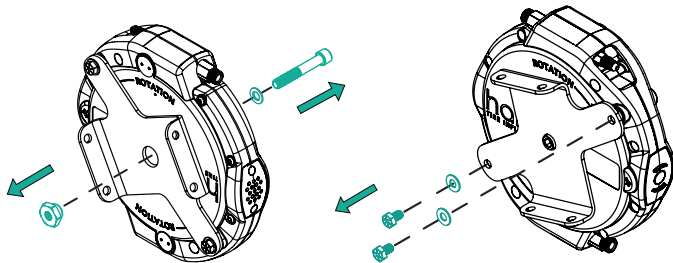


WARNING If the threaded insert inside the Halo starts spinning when the bolts are being removed, do not continue with reorientation. Contact Customer Support at +1 (650) 741-3231.

INSTALL NEW ADAPTOR PLATE


STEP 2: ALIGN ADAPTOR PLATE

**DO NOT TIGHTEN YET.
DO NOT USE TOOLS.**

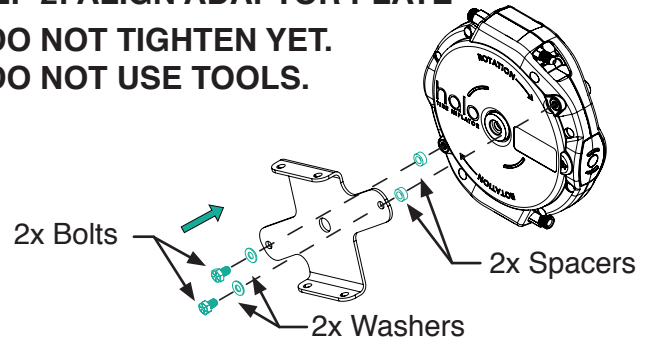

STEP 3: APPLY LOCTITE TO CENTER BOLT

 
Loctite® 242 (medium strength)



STEP 4: TIGHTEN CENTER BOLT

Tools: 7/8" wrench and 5/16" allen driver

**Torque: 35 ft-lb
(47 N m)**

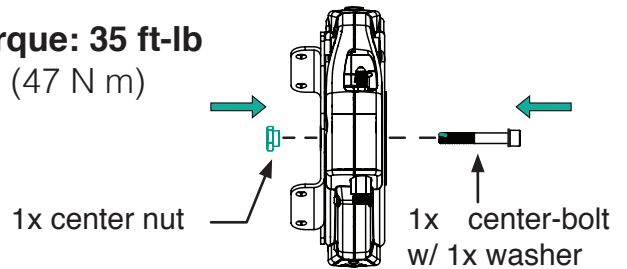

NOTICE

A table vice can be used to hold the adaptor plate to assist while tightening the center-bolt.




WARNING Follow instructions for Loctite® application. Not allowing time for Loctite® to fully cure prior to driving, may result in the Halo coming loose from the plate.

STEP 5: TIGHTEN OUTER BOLTS

Tool: 1/2" socket

**Torque: 20 ft-lb
(28 N m)**

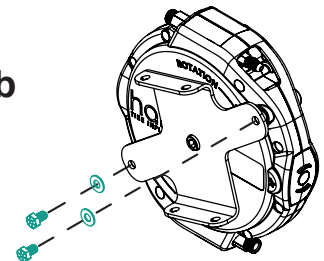

REINSTALL THE HALO

Start at Step 1 of the Installation section in the Halo user manual to complete the attachment to a wheel-end.